

Contact

Door / Window Sensor



The new Insight range combines modern aesthetic design with the high performance and robustness demanded by installers.

The Contact (Door and Window Contact) is an innovative door entry and exit solution. The sleek, wireless design comprising of a magnetic contact and detection device, has multiple operating modes that result in one device for all applications (see reverse). Contact is simple to configure and easy to use.

Contact

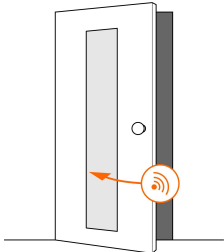 
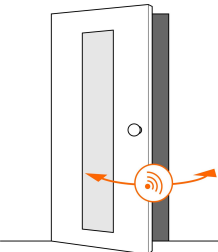 
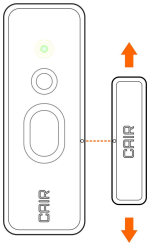 
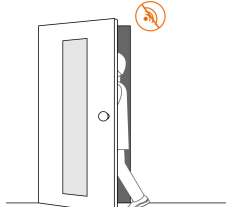 
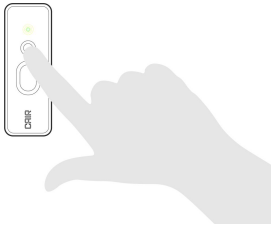 
Door / Window Contact

Features list

- Multiple configurable options
- Sleek minimal design
- Interoperable
- Waterproof
- Screw and adhesive options

Specifications

Part Numbers	M132-105 (Adhesive Mount) M132-112 (Screw Mount) Replacement Magnet - M115-375 & M115-376
Compatibility	Tunstall / TeleAlarm / Custom
Operating Frequency	869 MHz / Custom
Dimensions	Device - L94 x W33 x D12.3mm Magnet - L50 x W14.5 x D11.5mm
Replaceable Battery	CR2450 Coin Cell. Part Number M115-020
Battery Life	3 years under the following conditions - 5 alarm transmissions per day. Auto Low Battery compliant
Auto Low Battery	Battery tested daily
Mounting Options	Screw fixture / Adhesive
Wireless Range	600m line of sight
Waterproof	IP-67 standard
Operating Temp.	-10°C to +55°C
Compliance	CE / UKCA
Warranty	24 months

Open Mode  Alerts when door/window is opened	Open and Closed (virtual) Mode  Alerts when door/window is opened and closed	Installer Mode  Allows correct alignment of the magnet without transmitting alerts
Carer Entry/Exit Mode  Ideal for carers, press upon entry or exit to avoid transmitting an alert	Door Left Open Modes  Alerts when door/window is opened and repeats alert until it is closed. Can also be set to door/window left open only	Simple On/Off Button  Small button can be used as on/off button. Feature can be enabled or disabled

Door-exit alerts: carer visits & alert hours

Practical guidance to accompany the product information sheet. The sensor detects a door opening; it does not identify who opened it or confirm who has left the home.

Carer mode

With carer mode configured, carers can enter, close the door and press the button on the door contact to prevent the alert being sent to our monitoring team. Each carer needs to know this procedure. Ask our team to confirm the entry and exit procedure for the supplied sensor and settings.

If an alert comes through

Carers can explain to the operator that they are a carer, provided they are within speaking distance of the telecare base unit. The sensor itself does not recognise them as a carer.

Choose suitable monitoring hours

Alternatively, door alerts can be set for agreed hours, such as overnight, so they are inactive during other periods. We will discuss suitable timings around the person's routine and care visits, and confirm the setup and response plan.

A wearable alarm is optional

Compatible sensors can work with the home telecare base unit without the person wearing a pendant or Vibby. Sensors raise alerts for the events they are configured to detect.

Talk to us: 028 2036 0280

info@taskconnect.co.uk

taskconnect.co.uk/telecare-equipment/door-exit-alerts/